

TV Lift Cabinet Owner's Manual

Whisper Lift II



Living Room
Full Size 55" TV Lift Cabinets



Family Room
Mid Size 45" TV Lift Cabinets



Bedroom
End of Bed TV Lift Cabinets



Any Room
Universal TV Lift Cabinet

READ ME FIRST

1. After completing the unpacking and uncrating of the cabinet, you will find the Owner's Manual, TV, installation hardware, and the wireless remote all together and sealed in a clear plastic envelope and affixed to the underside of the cabinet.
2. To insure the safety and security during shipping, we package the wooden and/or glass shelves that come with some cabinets, along with the TV mounting brackets (2) under the main cabinet, and then we secure this with heavy duty strapping so it remains secure in shipping.
3. To access the package of parts, simply tilt the cabinet back on its edge and using a box cutter, cut the strapping as close to the underside edge of the cabinet as possible, releasing the package. Pull the package out and set the cabinet back down on its base. **CAUTION:** At least two people should be involved when tilting the cabinet back on its edge and always use great care when tilting the cabinet back on its edge to access the parts package.
4. Prior to starting the TV installation process, we recommend you write down the serial number for the cabinet which can be found on the 3x3 white rectangular label affixed prominently on the inside of the cabinet under the lid. The bottom line set of numbers on this label is the cabinet serial number.



Cabinet Serial Number

Table of Contents

About Your Touchstone TV Lift Cabinet	4
Storage Space.....	4
Other features common to all Touchstone cabinets:.....	5
Basic Lift Mechanism Features	5
Safety	6
Lift Components & TV Installation Hardware	7
Components	7
Hardware.....	7
Tools	7
Mounting and Installing the TV	8
Attaching TV Mounting Brackets to Flat Panel TV	8
Installing TV on Lift	10
Setting Height of Adjustable Roller Assembly.....	11
Operating the Touchstone Whisper Lift II	12
Operating Lift with Wireless Remote	12
Operating Lift with Wired Remote	12
Whisper Lift II Accessories	13
Infrared Repeater Kit (optional).....	13
Technical Support	13
Touchstone Home Products Limited Warranty	14
Warranty Coverage	14
Warranty Registration.....	14

About Your Touchstone TV Lift Cabinet

Congratulations on the purchase of your Touchstone TV Lift Cabinet. Touchstone Home Products takes pride in the quality of our cabinet craftsmanship and the smooth functionality of our TV lift mechanism. Please take a few minutes to learn about the features of your TV lift cabinet to insure you get the optimum use and performance from your new purchase.

Storage Space

- Our full size and mid-size cabinets come with ample storage space in the base of the main cabinet for placing your components. Cable boxes, DVR/DVD players, video game consoles can all be placed on the bottom of the cabinet and you can access the cords from the rear of the cabinet, using the handy slide panels in the back of the main cabinet.
- Side cabinets for additional storage are available for our full-size cabinets
- Each full size and mid-size cabinet comes with additional personal storage areas in the front for storing DVDs, CDs, books, video games, etc.
- Each full size and mid-size cabinet comes with adjustable shelves. The shelves can be installed and placed at desired heights in the cabinet by placing the shelf clips into the pre-drilled holes. This is the same procedure for setting the shelves in the side cabinets as well.
- If you purchased one of our 73000 series end-of-bed TV Lift cabinets, it comes equipped with a built-in component shelf which has room for at least two components, and raises and lowers with the lift, providing you with perfect line of sight and easy access to your cable box, DVD/DVR player, etc.



Full & Mid Size Main Cabinet Interior



End of Bed Cabinet
Component Shelf

About Your Touchstone TV Lift Cabinet – cont.

Other features common to all Touchstone cabinets:

- Cable management system that protects and manages wires while keeping the system neat, clean, and organized. Simply connect the components to the TV and “snake” the wires through our mesh “snake-skin” system to keep them well organized and away from the lift mechanism.
- All cabinets come with adjustable feet in all four corners of the cabinet. These can be used to raise/lower the cabinet, and to level the cabinet so that all doors and lid operate smoothly.
- Additional Cabinet Features (unique to certain cabinets only)
- Our transitional series of cabinets that have glass fronts come with internal lights that operate by simply touching the hinges on the doors.
- Our Adonzo 70052 media cabinet comes with a pull down speaker mesh compartment in the front of the main cabinet that is perfect for placing a Center Channel speaker, a 3.1 Sound Bar, or a vide game console.
- Our Adonzo 70052 media cabinet also comes standard with wood front or mesh fronts, so that you can mix/match depending up on your audio-visual requirements for your system.
- Our 73000 series cabinets come with a built-in component shelf that can store at least two (2) components.



Cable Management System



70052 Pull Down Media Compartment

Basic Lift Mechanism Features

- Lift mechanism comes fully assembled and ready for TV mounting (see the Mounting TV section)
- Our lift is very quiet because it operates on a low voltage actuator (think piston that goes up and down).
- Our lift is durable and comes with a 2 year warranty. However, should a part fail, it is very easy to replace.
- Our unique roller extension gently and smoothly raises and lowers the lid of your TV Lift cabinet, saving wear and tear on your lift, and providing a soft and save closure. The extension also allows for the TV to be mounted higher on the lift, giving you more room for components in the bottom of the cabinet.

Safety

Installing your Flat Screen TV in your Touchstone TV lift cabinet is fast and easy. Operating your lift is very straightforward. However, to avoid the risk of personal injury and to insure optimum performance of your TV lift mechanism, please pay particular attention to the warnings and safety notices throughout this manual.

IMPORTANT SAFETY and PRE-INSTALLATION INSTRUCTIONS

1. Please adhere to the proper installation procedure as detailed in the installation instructions.
2. Safety precaution measures must be practiced at all times during installation of this product.
3. The entire installation instructions should be fully read and understood before beginning installation.
4. At least two people should be available to mount the TV on the lift mechanism. Please take care when handling your flat screen TV as injury and damage can result from dropping or mishandling of the TV.
5. Plasma screen TV's should remain upright at all times. Never place screen face down on the floor. This could cause damage to the TV.
6. **The stand on your flat screen TV is removable!** Please remove the stand prior to installing the TV on the lift mechanism. Consult your TV's owner's manual for instructions for removing the stand.
7. Carefully measure all dimensions of your LCD, PLASMA, or LED TV before proceeding. Then consult the **Mounting and Installing the TV** section of this manual for maximum TV size.


IMPORTANT!: After installing your TV, you may find there is room in the bottom of the cabinet to install a small cable/satellite TV box. Once the TV is mounted, remove the front panel on the Elevate TV Lift Cabinet and completely lower the lift. Carefully inspect the space between the bottom of the TV and the bottom of the cabinet to see if your component will fit in the bottom of the cabinet. Consult the **Mounting and Installing the TV** section of this manual for more information.

8. All cords connecting components to the TV should be a minimum of 72" (6 feet) in length when installing component inside of cabinet or a minimum of 144" (12 feet) in length when installing component outside of cabinet (length of cable will depend on placement of your component).
9. **WARNING!:** TV Lift Mechanism contains moving parts. Please keep hands, arms, and fingers away from the lift and cabinet lid opening when the lift is in motion. Cables should be wire-tied or secured neatly so lift does not contact them during operation.

Contact Touchstone Customer Service at 1-800-215-1990 for any questions regarding the operation of your TV lift cabinet. We are also available on the web at www.touchstonehomeproducts.com

Lift Components & TV Installation Hardware

Components

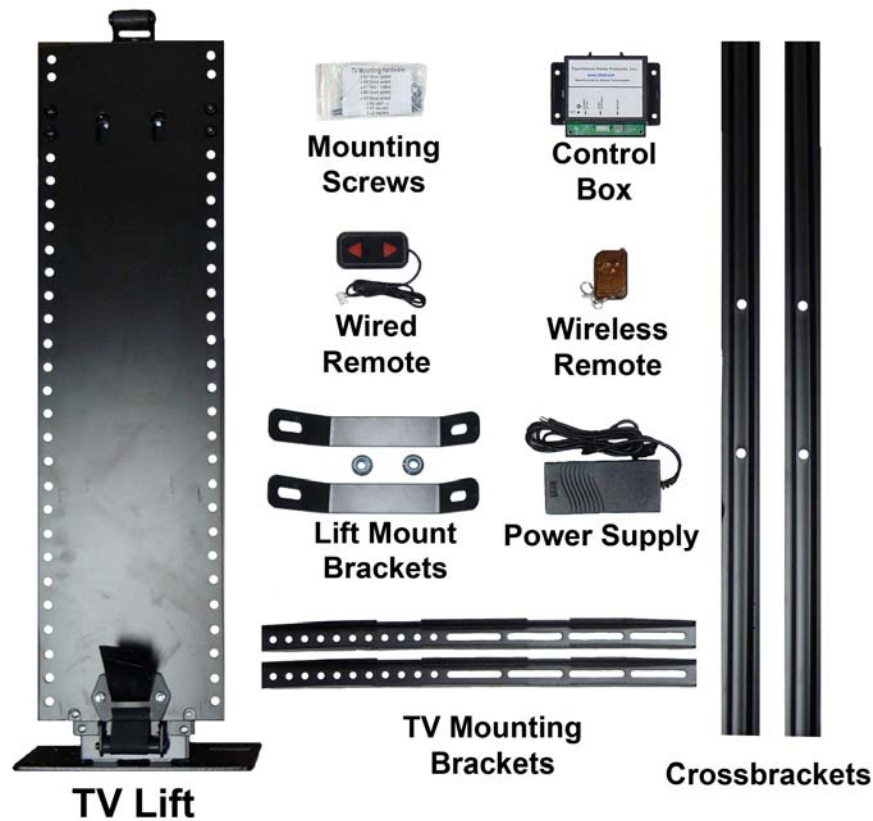

Hardware

- 4 Lift Mounting Screws (included)

- TV Mounting Screws

-> Please consult your TV manufacturer for the size and length of the mounting screw for your TV. Included is a basic set of mounting screws that accommodates most LCD/Plasma TVs. Depending on your television, the screws included in the kit may not fit your television. If that is the case, these screws can be purchased at most hardware/home improvement stores.

Tools

In order to assemble the Whisper Lift II, you will need the following tools:

- Philips-head screwdriver
- size 4 metric hex wrench
- size 5 metric hex wrench
- adjustable wrench or size 4 and size 5 metric socket wrench

Mounting and Installing the TV

IMPORTANT: Prior to installing the TV onto the lift, please ensure the following:

- If you have not done so already, remove the stand from your flat screen TV.
- TV weight needs to be under 100lbs.
- TV has VESA compliant mounting pattern.

Attaching TV Mounting Brackets to Flat Panel TV

Tools Required

- Phillips head screwdriver

Parts Required

- TV mounting brackets
- TV mounting screws

***Note: Touchstone Home Products includes a screw pack containing some of the most popular sizes of mounting screws, used by most TVs on the market. Due to the amount of TVs in the marketplace and no standard for mounting screw size, Touchstone Home Products cannot guarantee that the screws required for your TV are included in the screw pack. Please consult your TV manufacturer for the size of the mounting holes in the back of your TV and use the appropriate size screws. Touchstone Home Products assumes no liability for damage to a TV.

Instructions


1. Remove stand from TV. Consult TV manual for instructions on removing the stand from the TV.
2. Located the TV mounting brackets. They are pictured below.



TV Mounting
Brackets

Attaching TV Mounting Brackets to Flat Panel TV- cont

3. Align TV mounting brackets so that brackets are centered on the back of the TV. Place the TV mounting bracket so that the slotted holes are toward the top of the TV, while the round holes are toward the bottom of the TV.

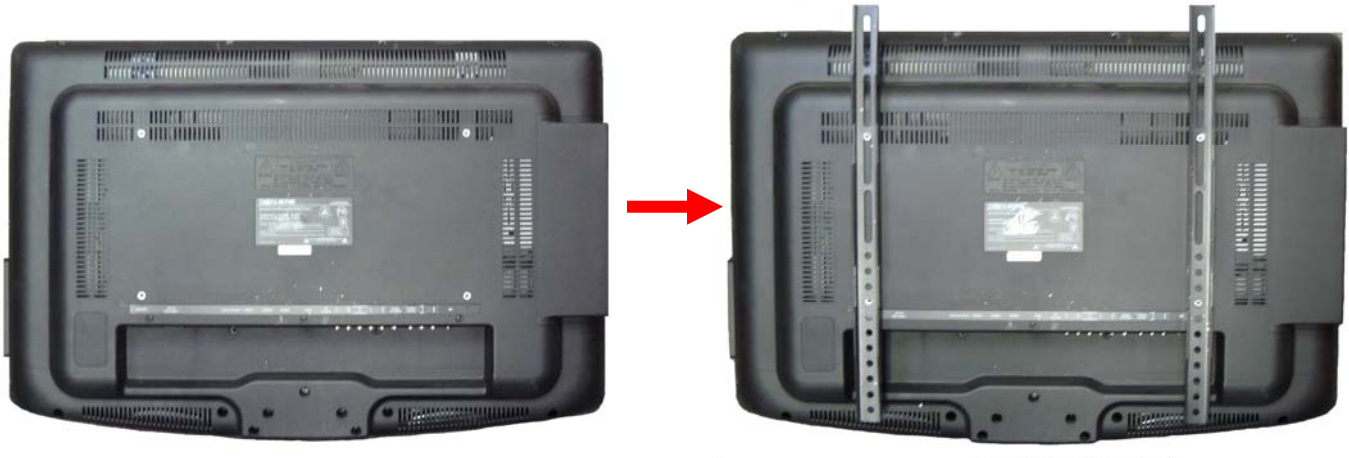

3. Attach TV mounting brackets to back of TV. Consult your TV owner's manual for the proper size mounting screw.



Installing TV on Lift

1. Using the internal wired control, move the lift to the up position. The UP button is the button opposite of the cable side of the wired remote.



2. Hang TV on top crossbracket.



3 With TV hanging on top crossbracket, slightly raise the TV (A) and push it back toward the lift (B) so that the bottom crossbracket is centered between the bottom set of hooks on the back of the TV mounting brackets.



4. Move the TV down slightly to fully attach TV to crossbrackets. The TV will hang on the top crossbracket and the upper set of hooks on the bottom of the TV mounting brackets will lock the TV in place from moving while on the lift.

Setting Height of Adjustable Roller Assembly

Each Whisper Lift II comes with an adjustable roller assembly that allows you to set the maximum height of the lift.

Tools Needed:

- adjustable wrench or 4mm socket wrench
- size 4 metric hex wrench

Instructions:

1. Raise the lift to a height that is comfortable for you to work at.
2. The adjustable roller is held in place by 2 4mm hex screws on either side of the lift. Using the size 4 metric hex wrench and adjustable wrench/socket wrench, remove all 4 screws holding the adjustable roller in place.



3. Raise the adjustable roller to the desired level and refasten the adjustable roller to the lift using the screws/nuts removed in step 2.
4. Adjust height of adjustable roller as needed so that the lid of the cabinet closes flush.

Operating the Touchstone Whisper Lift II

Operating Lift with Wireless Remote

The remote control for your Touchstone Whisper Lift II is controlled via radio frequency. You do not need to point the remote control directly at the cabinet to operate the lift.



<u>Button</u>	<u>Function</u>
A	LIFT DOWN
B	STOP LIFT
C	LIFT UP

Operating Lift with Wired Remote

A wired control is included with your Touchstone Whisper Lift II, which can be mounted inside of the cabinet and control the lift should you misplace the wireless remote control.



Whisper Lift II Accessories

Infrared Repeater Kit (optional)

We have conveniently predrilled a hole in the upper right-hand corner of the front panel of the Elevate TV cabinet that will allow for the mounting of the Touchstone Infrared Repeater Kit (part number 70012). The Touchstone Infrared Repeater allows the customer to install a small satellite TV/cable box in the bottom of the cabinet. The Touchstone Infrared Repeater allows the user to change the channel on their box without having direct line of sight to the component.

For more information on the Touchstone Infrared Repeater Kit, please visit <http://www.touchstonehomeproducts.com/irrepeaterkit.html> or call our Customer Service Department at 1-800-215-1990 for more information and pricing.

Technical Support

Should you have any problems with your Touchstone Home Products Elevate TV Lift Cabinet, our technical support staff is here to support. Our technical support reps are available Monday to Friday from 8:00am to 5:00pm EST for phone assistance at 1-800-215-1990. We also can be reached via email at support@touchstonehomeproducts.com 24hrs per day.

Touchstone Home Products Limited Warranty

Warranty Coverage

Touchstone Home Products, Inc warrants the lift mechanism and control box units to be free of defects in material and workmanship for one year. Touchstone will repair or replace any lift mechanism and/or control box unit that is defective or becomes defective during normal use within one year after the date of purchase.

Touchstone does not warrant its products against damage caused by third parties.

The warranty does not cover paint scratches, cosmetic blemishes, or other normal wear and tear associated with the cabinet.

Extended warranty coverage for the lift mechanism is available by contacting Touchstone directly at 1-800-215-1990.

Warranty Registration

To register your Touchstone TV Lift cabinet, please go to our website at <http://www.touchstonehomeproducts.com/warranty-registration.html>

Prior to registering, make note of your cabinet serial number which can be found on the 3x3 white rectangular label affixed prominently on the inside of the cabinet under the lid. The bottom line set of numbers on this label is the cabinet serial number.



Cabinet Serial Number