

## **Models** covered

UD-701N

# **Supported operating systems**

Windows 7 (32/64-bit) Windows 8 (32/64-bit) Windows 8.1 (32/64-bit) Windows 10 (32/64-bit) Windows11 As of Feb, 2022

### NOTE

In this manual, we refer to the UD-701N as "the unit".

## Checking the firmware version

- 1 Turn the unit on.
- 2 Press the MENU button to open the menu screen.
- 3 Turn the SOURCE knob to show the firmware version (VERSION INFO).

Display example



The number shown to the right of "SYSTEM" is the firmware version.

# **Update procedures**

A micro-USB cable is necessary to update the firmware.

Use a commercially-available cable.

## ATTENTION

Cables designed only for charging cannot be used. Always use a micro USB cable that supports data transmission.

#### NOTE


The screens used in these instructions are from Windows 10.

# 1 Uncompress the downloaded file.

The following files will appear.

- Win\_DFU\_driver.exe
- UD701N\_updater\_xxxx.exe (xxxx is the firmware version)

2 Double-click Win\_DFU\_driver.exe, and press the Enter key.



### NOTE

If a "User Account Control" pop-up message appears during installation, click "Yes".

3 When the Device Driver Installation Wizard appears, click "Next".



4 Click "Finish".





5 While pressing and holding the SOURCE knob, set the unit's STANDBY/ON switch to ON.

F/W UPDATE

⇒ SYSTEM UPDATE?


6 When "F/W UPDATE" appears, turn the SOURCE knob to show SYSTEM UPDATE. Then, press the SOURCE knob.

UPDATE F/W!! Don't power off!


If the screen shown above does not appear, set the unit's STANDBY/ON switch to STANDBY, and repeat step 5.


7 Use a micro USB cable to connect the computer to the SOFTWARE maintenance port on the back of the unit.

Refer to the unit's operation manual for the location of the maintenance port.

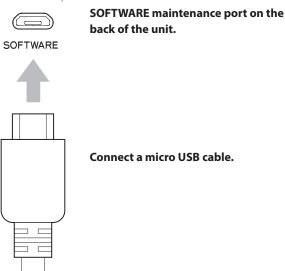


8 Double-click UD701N\_updater\_xxxx.exe, and click OK.

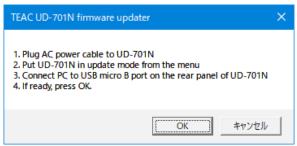

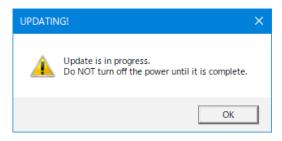


## NOTE

The following screen will appear if the unit is not recognized by the computer. Click the  $\times$  at the top right of the window to close it

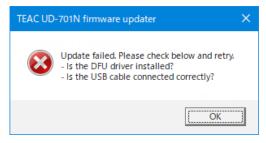

Check the connection between the computer and the unit, and double-click UD701N\_updater\_xxxx.exe.

- Cables designed only for charging cannot be used for firmware updates. Use a USB cable that supports data transmission.
- Connecting to a different USB port on the computer might allow it to recognize the unit.
- 9 When "Update is completed!" appears, click OK to close the window.

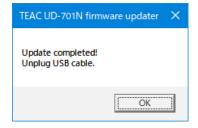

## 10 Disconnect the micro USB cable from the unit.

Disconnecting the USB cable will automatically restart the unit. Follow the procedures in "Checking the firmware version" on the previous page and check the firmware version.

Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Other company names and product names in this document are the trademarks or registered trademarks of their respective owners.

**2** 0222 MA-3442A